



Allison Installation Instruction

Installation Instructions

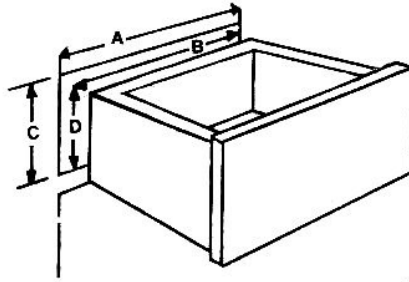


Make drawer dimension "B" $1''$ to $1\frac{1}{16}''$ narrower than opening dimension "A", and depth dimension "D" $\frac{1}{4}''$ minimum less than opening dimension "C".


All parts identified for easy installation.

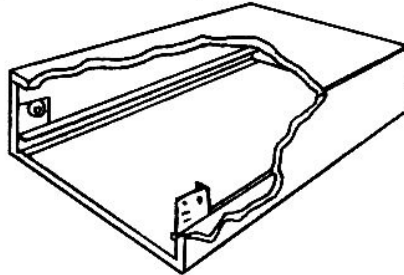

Mount cab members CL & CR flush with front and bottom of casing.

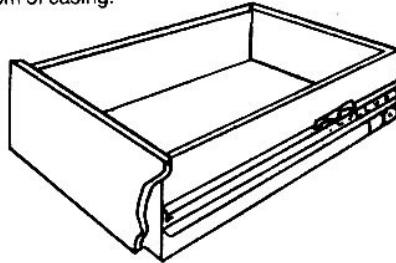

Mount drawer members DL & DR flush with bottom of drawer side.

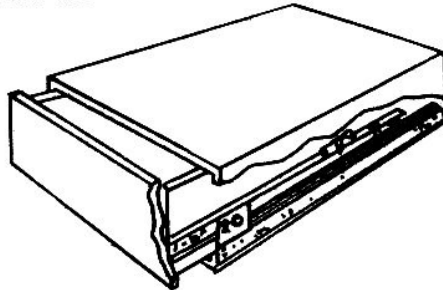

All members have vertical slots for adjustment.

Insert drawer—ready for use. Drawers can easily be removed by pressing down stop lever.

Note: Mounting along the bottom, as indicated, is the simplest method, but slide can be mounted higher on drawer and cabinet if desired.

Sheet metal screws enclosed.

DAVID ALLISON CO., INC. Woodbury, New York 11797